LOG-IC360 USB DATA LOGGER USERS GUIDE

multi

09E 21-907

09E JI 907

🧼 ati

IJ



a C≁≪∕∪ group company

AMERICANTHERMAL.COM 937.429.2114 | INFO@AMERICANTHERMAL.COM

TABLE OF CONTENTS

G	ETTING STARTED	3-4
	System Requirements & Software	3
	Configure, Re-configure, or Modify Your Logger Settings	4

Starting & Stopping the Logger	.5
Reading the LED Indicators	.6

CONNECTING TO THE DEVICE & RETRIEVING THE DATA		
	Reading the Temperature Data	7
	Reading the Humidity Data (only valid for a Temperature + Humidity Device)	7



LOG-IC[®] 360 BT GETTING STARTED

SYSTEM REQUIREMENTS & SOFTWARE

LOG-IC PDF LOGGER Windows or Mac-based operating systems

I-PLUG MANAGER Windows-based operating systems only

LOG-IC PDF Loggers are easily programmable using our cloud platform CAVU Hub. You must be on a Windows-based operating system to install the LOG-IC Connect agent.





3

LOG-IC® 360 BT GETTING STARTED

CONFIGURE, RE-CONFIGURE OR MODIFY YOUR LOGGER SETTINGS

*Once your LOG-IC PDF logger is active, do not plug into a USB port unless you want to stop the logger.

CREATE AN ACCOUNT

- 1. Visit www.cavuhub.com
- 2. Create an account by selecting **REGISTER** and filling in your credentials.
- 3. A confirmation email will be sent with a link to create a password

LOG-IN

- 1. Visit www.cavuhub.com
- 2. Enter your credentials and select LOGIN

CONNECT

For first-time users, you must Open the LOG-IC Connection

- 1. Navigate to LOG-IC Connect within CAVU Hub
- 2. Download and install the latest version
- 3. CAVU Hub will indicate when the LOG-IC PDF logger can be plugged in

CONFIGURING OR MODIFYING SETTINGS

- 1. Plug-in the LOG-IC PDF Logger
- 2. If the device is not recognized, click the **START**

or **ON/OFF** ON button on the logger

- 3. Select Change LOG-IC Settings
- 4. You will then be able to program or modify your device:
 - Temperature Comments
 - Start Delay 4 Alarms
 - Log Intervals
- 5. Select Save & Reset





USING A PRE-CONFIGURED

STARTING & STOPPING THE LOGGER

STARTING THE LOGGER

When you are ready to actively track temperature with your logger:

- Press and hold the START button until all 4 LED's flash, releasing when the GREEN LED is active (approximately 5 seconds).
- The GREEN LED will then begin flashing, verifying the logger is active or in Start Delay.

STOPPING THE LOGGER

LOG-IC PDF loggers are programmed with a typical or customized trip duration and will continue to record until the end of that duration.

There are 2 different ways to stop the device before the end of a trip duration:

- Press and hold the STOP button for 6 seconds until all 4 LED's flash, releasing when the RED LED is active and fixed.
- 2. Plug the device into a USB port of a computer.





USING A PRE-CONFIGURED LED LOGGER

READING THE LOGGER

If you press the **START** button at any time, LED indicators give valuable information about your temperature data:



LED INDICATORS MEANING



READY STATE | 4 Blinking LED Indicators

Device has not been started. NOTE: When the device is in this state, only the start button is active.



RUNNING STATE | Blinking Green

This confirms that the device is in Start Delay or actively logging. NOTE: There is a fixed green LED indicator during the first 2 minutes of recording.



STOPPED STATE | Fixed Red This confirms that the device is no longer act

This confirms that the device is no longer actively logging



LOW ALARM TRIGGERED

Blinking Blue | In the Running or Stopped State, a blinking blue indicator identifies a low alarm has been triggered.
Fixed Blue | In the Running or Stopped State, a fixed blue indicator shows an ultra-low alarm has been triggered.

HIGH ALARM TRIGGERED



Blinking Orange | In the Running or Stopped State, a blinking orange indicator identifies a high alarm has been triggered.
Fixed Orange | In the Running or Stopped State, a fixed orange indicator identifies an ultra-high alarm has been triggered.



a CAVU group company

CONNECTING TO THE DEVICE & RETRIEVING THE DATA

Upon plugging in to any USB port, the LOG-IC PDF logger will be detected as a USB drive and will be recognized without any additional software. **Do not plug in the logger unless you are ready to stop the device**. There are 2 possible situations when plugging in your device:

- If the device was not previously logging, press the START button or the ON/OFF
 button for the computer to detect.
- If the device is active or was previously stopped, the computer will automatically detect the logger and begin to generate the PDF report. Do not remove the logger during the download.

Once the report is ready a new USB Drive will appear on your PC, allowing you to download the PDF report.

Based on the configuration of your logger, it could take up to 45 seconds for the PDF report the be generated.

READING THE TEMPERATURE DATA

A detailed graph will be provided once the temperature data is downloaded. Temperature information will be displayed in red and temperature readings will appear on the left side of the screen.

READING THE TEMPERATURE AND HUMIDITY DATA

A detailed graph will be provided once the temperature and humidity data is downloaded. Temperature information will be displayed in red and temperature reading will appear on the left side of the screen. Temperature humidity will be displayed in blue and humidity readings will appear on the left side of the screen.

ATI23-038_LOG-IC_USB_Data_Logger_User_Guide © 2023 American Thermal Instruments, Inc. All Rights Reserved. All other trademarks are the properties of their respective owners.



