



prote-go™
thermal management on the go

SAFELY TRANSPORT SAMPLES TO YOUR CUSTOMERS

The prote-go sample carrier was created to help your sales professionals safely transport temperature-sensitive samples to the point of care, giving you assurance that your product is protected.

Temperature **excursions** are not just a problem when shipping products long distances. Your samples also need to be protected as you travel across town. With the ongoing development of temperature sensitive medical devices and pharmaceuticals, **temperature fluctuations** add a dangerous risk when you are introducing new products to customers. The prote-go carrier **protects against** this unique challenge. This performance packaging system allows you to carry an entire day's worth of samples, traveling to each appointment knowing that your samples are safe from your first meeting until your last.



PROTE-GO SPECIFICATIONS

External Size	16" x 13" x 14"
Internal Size	25L
Weight	6 lbs
Temperature Range	Holds payload between 15°C and 30° when environmental conditions are 15°C to 47°C.

BENEFITS INCLUDE


inventory management | lightweight
customizable | temperature monitoring
easy conditioning | soft sided





The prote-go sample carrier combines the **style** and convenience of a messenger bag with the **performance** of a validated shipper. It can be reused hundreds of times, it is an affordable, durable, and convenient option to transport your samples wherever you need to go. This lightweight tote has over **25L** of payload space and has room to carry your laptop as well as other accessories. Best of all, the prote-go sample carrier **does not require lengthy or complicated packing and conditioning processes**. This passive system resets simply by being stored overnight, open, and at room temperature.


Test A - Average Summer Temperature (US) 22°C - 35°C

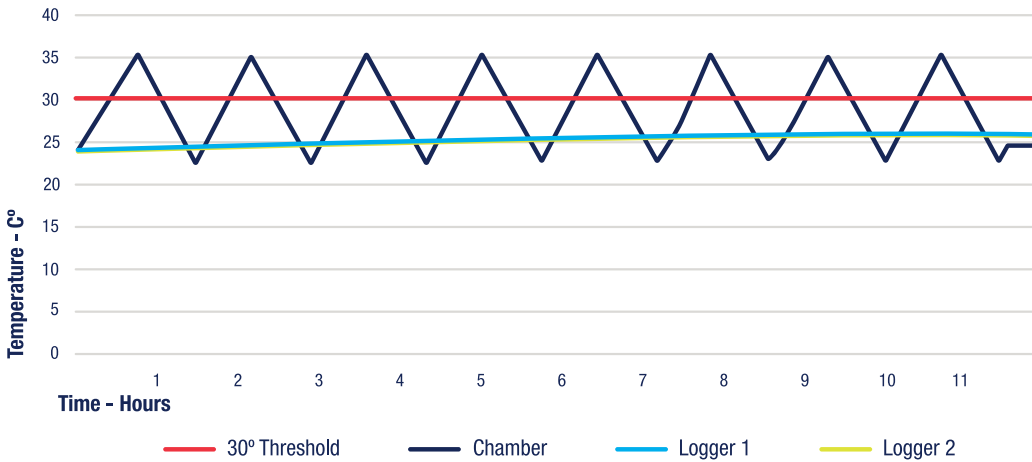

Temperature environment from 22°C (72°F) to 35°C (95°F) and back to 22°C (72°F) every 84 minutes to represent being carried into appointments an average of eight times per day. Notice that the product remains well below the maximum threshold of 30°C.

Temperature environment from 22°C (72°F) to 47°C (117°F) and back to 22°C (72°F) every 84 minutes to represent being carried into appointments on a hot day an average of eight times per day. Even in an extreme environment the sample still remained under 30°C.

Test B - Extreme Summer Temperature (US) 22°C - 47°C

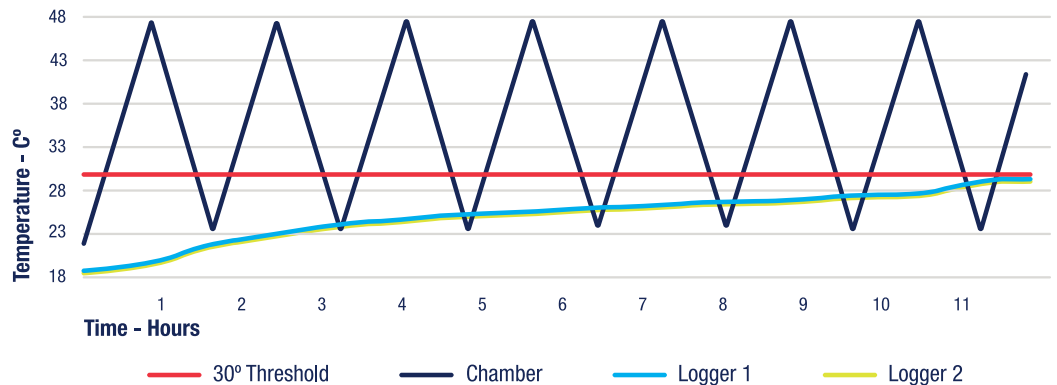

Do you have storage requirements outside of CRT or do you require a custom solution? As a leading provider of thermal management solutions, the CAVU Group offers a wide array of custom and thermal solutions.

Contact an expert at **937.429.2144** or at **info@cavugroup.com** to learn more.

cavugroup.com | 937.429.2114 | info@cavugroup.com



Prote-go is manufactured in an ISO 9001:2015 certified and an FDA registered facility.